Section 2

IMPORTANT: Check the Toyota on-line system for any Maintenance for Normal Operating Conditions

outstanding manufacturer service campaigns

Date:

Km:

☐ Drive belts

Toyota Service Centre Verification Newcastle 2304

☐ Drive belts	☐ Inspect valve clearances (sensory method)	Inspect, correct or adjust the following:	☐ Road test vehicle	☐ Balance front wheels	☐ Rotate wheels	☐ Replace brake fluid	☐ Replace engine air cleaner filter	☐ Replace fuel filter, including in-tank filter	☐ Replace spark plugs	☐ Replace engine coolant	☐ Replace engine oil and filter	
□ Drive shaft boots	☐ Steering wheel and linkage	☐ Clutch fluid ☐ Rrake pines and hoses	☐ Brake pads and discs									

□ Battery □ Fuel tank cap, fuel lines, ☐ Charcoal canister □ Brake linings and drums Brake pedal and parking connections and fuel vapour control valve including parking brake

☐ Cooling and heater system; check that the radiator and ☐ Exhaust pipes and condenser are not blocked with leaves, dirt, or insects, and corrosion for installation condition and the hose connections mountings ☐ Suspension ball joints and ☐ Automatic transmission ☐ Front and rear suspensions ☐ Manual transmission oil ☐ Tyres and inflation ☐ Accessory items dust covers Lights, horns, wipers and pressures washers

Seatbelt, webbing condition, buckle and retractor mechanism

Air conditioner, including refrigerant level operation